




## **CAM-VW5 AD**

**Rear View Camera Input**

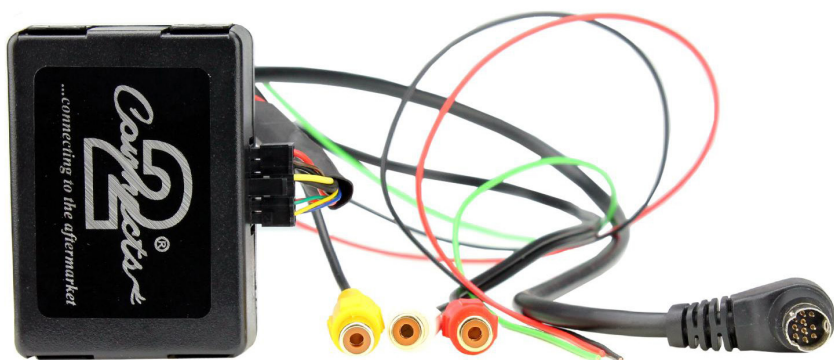

### **Application:**

**Volkswagen Bora 1997 - 2003**  
**Volkswagen Golf (MK4) 1997 - 2003**  
**Volkswagen Jetta 1997 - 2004**  
**Volkswagen Passat 1997 - 2004**  
**Volkswagen Sharan 1995 - 2009**  
**Volkswagen Transporter (T4) 1997 - 2003**

**For MFD1 Navigation Head Units (4:3)**

***[www.connects2.com](http://www.connects2.com)***



## **CAM-VW5-AD**

Rear-View Camera Input for VW vehicles that have MFD1 (4:3) navigation systems. Add on Camera interface - allows the addition of reverse camera video to the OEM screen - designed for vehicles without factory TV tuner. **\*\*Manual switching to camera input only\*\***

**Note: Factory TV-Tuner must not be installed. NTSC cameras only.**

## **Prior to Installation**

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

**Connects2 can not be held responsible for the installation of this product.**

## **Technical Support**


Connects2 want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Connects2, try to provide as much Information as possible. This will speed up the process and help us to help you.

**Please use our dedicated online technical support centre: [support.connects2.com](http://support.connects2.com)**



Subscribe to our YouTube Channel for installation guides and tips... [www.youtube.com/connects2](http://www.youtube.com/connects2)

## Connection Diagram

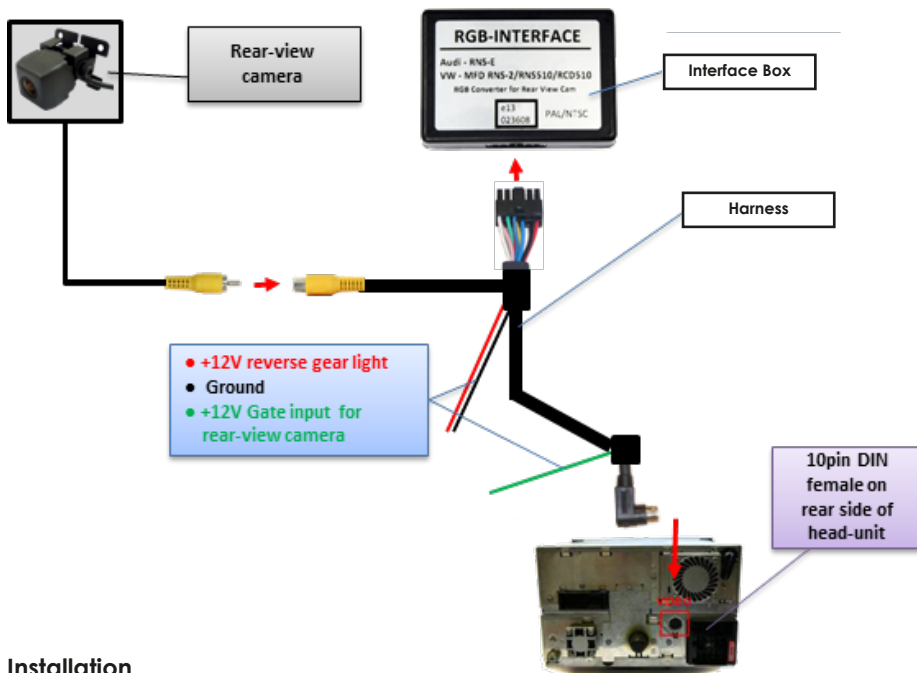


## Installation

NB: Before installation, switch off ignition, disconnect the vehicle battery and remove the vehicle's head unit.

## Connecting Interface, Harness and Head-Unit

1. Plug the harness into the 12pin molex connector on the interface.
2. Plug the male 10pin DIN-connector of the harness into the female 10pin DIN-connector of the head-unit.
3. Connect the red and green cable of the harness to +12V reverse gear light and the black cable of the harness to ground.

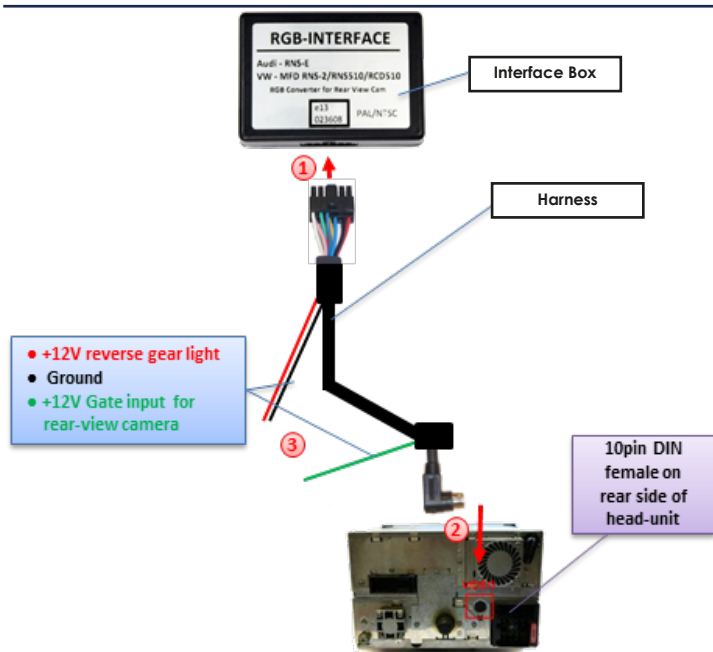

NB: If the female 10pin DIN-connector of the head unit is already occupied, the vehicle has a factory TV-tuner. In this case it must be uninstalled. Disconnect the male 10pin DIN-connector of the factory harness and disconnect all wires from the factory TV-tuner.

## Connections to Aftermarket Rear-View Camera

1. Connect the video RCA of the aftermarket rear-view camera to the female RCA connector of the supplied harness

NB: The rear view camera image must be manually activated by the user

