




CT23LR06/07

## Double DIN Fitting Kit for Land Rover Vehicles

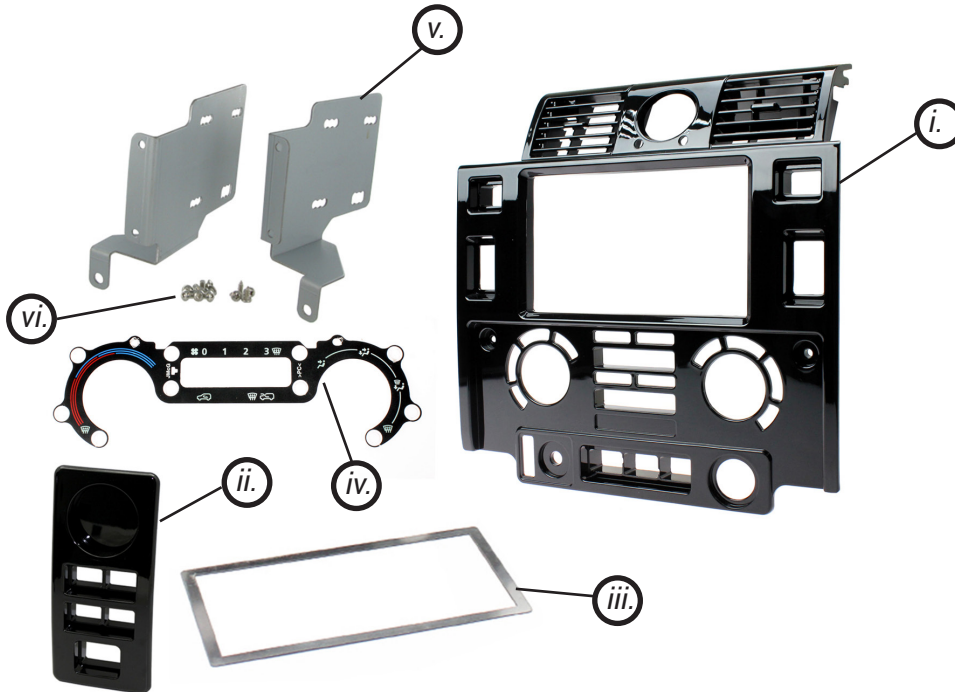

### IN THE KIT

- i.* Double DIN Fascia Panel
- ii.* Side Panel
- iii.* Trim
- iv.* Cluster Detail
- v.* Stereo Brackets (R/L)
- vi.* Screws

## APPLICATION

*Note: Application data is subject to change at any time*

**Land Rover Defender                      2007 - 2016**

**Black (Gloss Finish) - CT23LR06**

**Black (Matt Finish) - CT23LR07**

## RECOMMENDED TOOLS

- Panel Removal Tool
- Screwdriver
- Cutting Tool

## FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Includes mounting brackets and fitting accessories
- Finished in black (gloss/matt) to match vehicle dashboard

### DISCLAIMER

*The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.*

# PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. Connects2 can not be held responsible for the installation of this product.

PLEASE NOTE THAT **DASHBOARD MODIFICATION IS REQUIRED IN ORDER TO PROVIDE SPACE FOR THE DOUBLE DIN HEAD UNIT.** SEE PAGE 2 FOR MORE DETAILS.

## INSTALLATION GUIDE



Remove the OEM radio using a set of release keys



Remove the T-30 screws from the main OEM fascia panel




Remove the fascia panel and all buttons/switches, including the OEM clock

# INSTALLATION GUIDE

---

4

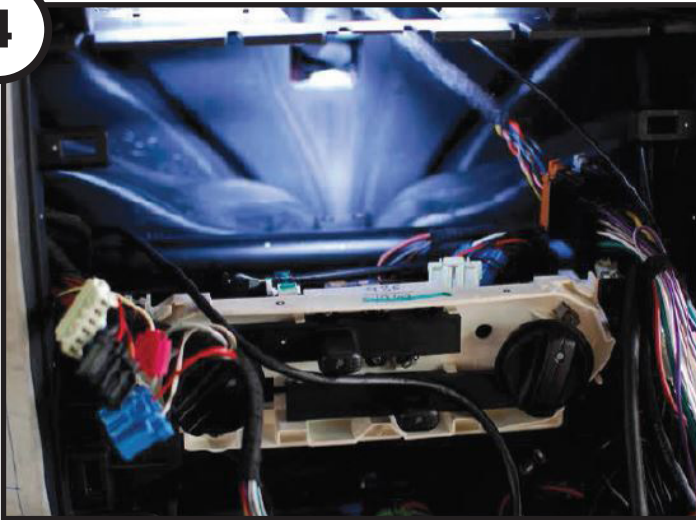

Remove the metal clips and reroute the air vent wiring

5



Measure the side panel and cut a hole in the dashboard. Place the side panel into the newly cut dash location

6




Install the buttons/switches previously removed from the OEM fascia panel into the new fascia panel. Make sure that the cluster detail is also pushed into the fascia panel

# INSTALLATION GUIDE

---

7

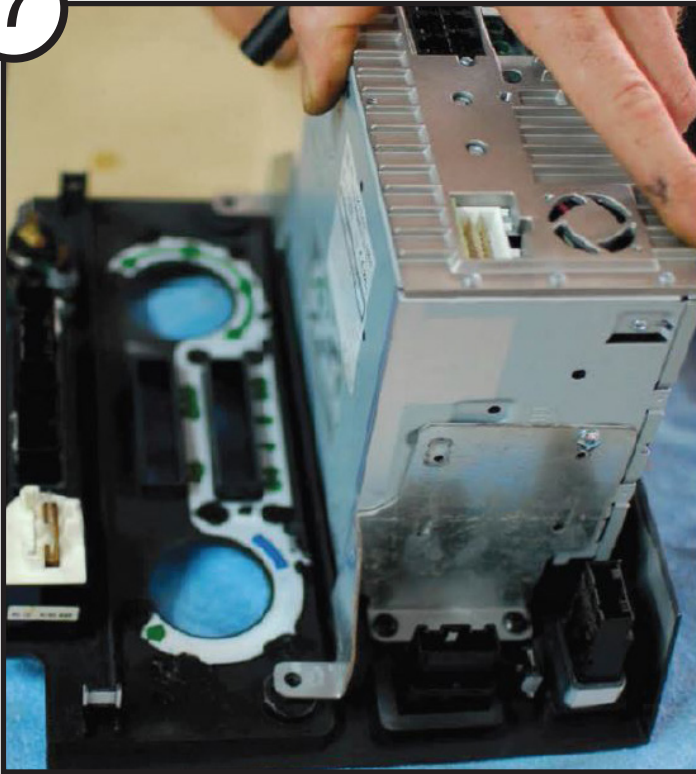

Attach the double DIN stereo to the mounting brackets and main fascia panel, and screw into place.

8



Place the stereo into the dashboard and make all wiring connections to the stereo. Reassemble the remaining dash components in the reverse order of