
APPLICATIONS Toyota 4-Runner Limited 2003-2009

CT23TY15

KIT FEATURES

- Double DIN Radio Provision
- Stacked ISO Mount Units Provision



KIT COMPONENTS

A) Double Din Trim Plate • B) Double DIN Brackets

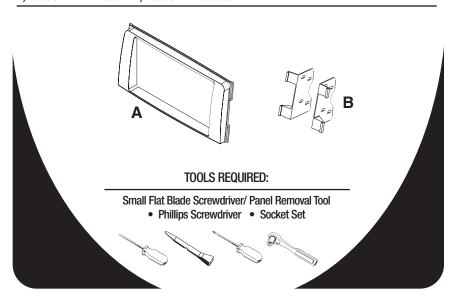


TABLE OF CONTENTS


1,2
3
4
5


Refer also to the instructions included with the aftermarket radio.


*Note:


Toyota 4-Runner Limited 2003-2009

- Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unsnap and remove trim from around shifter. (Figure A)
- 3 Unsnap and remove center console cover. (Figure B)
- 4 Unsnap trim ring from around ignition key cylinder.
- 5 Remove (1) 10 mm bolt from bottom right side of panel below steering column. Unsnap panel and pull away to gain access behind panel. (Figure C)
- 6 Remove (1) 10 mm bolt on bottom left of center panel behind panel below steering column. ((Figure D)

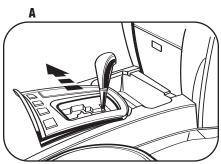

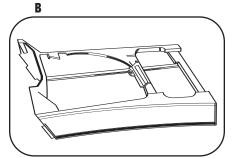

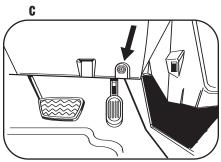


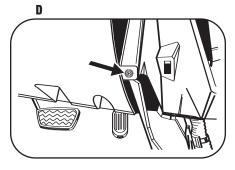



Toyota 4-Runner Limited 2003-2009


- 7 Remove (1) 10 mm bolt beneath climate control behind pocket door. (Figure E) Unsnap climate control, unplug and remove climate control. (Figure F)
- 8 Remove (2) 10 mm bolts beneath radio behind climate controls. (Figure G)
- **9** Unsnap and remove entire center panel around radio.
- 10 Remove (2) 10 mm bolts securing radio. Unplug and remove radio. (Figure H)

Continue to final assembly.

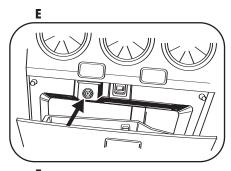

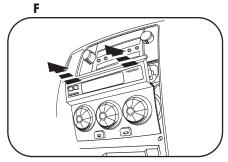

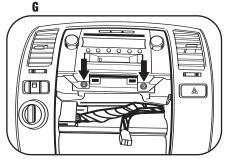

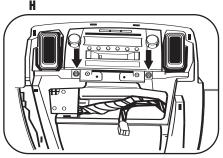



DOUBLE DIN RADIO PROVISION


*Note: Refer also to the instructions included with the aftermarket radio.

- 1 Snap the factory brackets to the side of the radio. (Figure A)
- 2 Snap the Double DIN brackets to the outside edge of the Double DIN trim plate. (Figure B)
- 3 Slide the Double DIN radio into the bracket/trim plate assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure C)

Continue to final assembly.

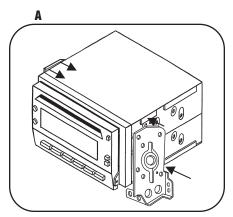

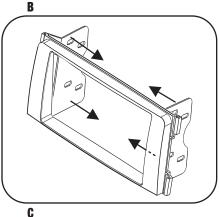

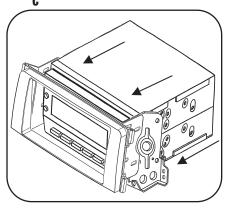

STACKED ISO UNITS PROVISION

*Note: Refer also to the instructions included with the aftermarket radio.

- 1 Snap the factory brackets to the side of the radio. (Figure A)
- 2 Snap the Double DIN brackets to the outside edge of the Double DIN trim plate. (Figure B)
- 3 Slide the stacked ISO mount units into the bracket/trim plate assembly and secure the units to the assembly using the screws supplied with the units. (Figure C)

Continue to final assembly.

