


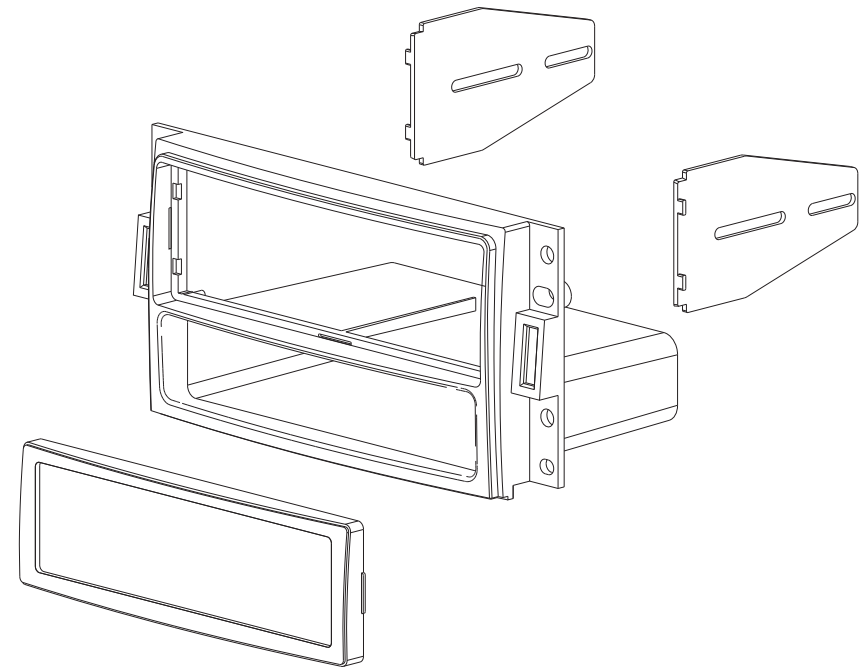

VEHICLE APPLICATIONS

Buick	2005-07	RELAY
2005-07	TERRAZA	
Chevy	2005-10	CORVETTE
2005-08	UPLANDER	
Hummer	2005-09	H3
2009	H3T	
Pontiac	2005-06	MONTANA SV6
Saturn		

2005-07 BUICK TERRAZA
2005-08 CHEVROLET UPLANDER
2005-06 PONTIAC MONTANA SV6
2005-07 SATURN RELAY

DASH DISASSEMBLY INSTRUCTIONS

1. Carefully unclip the trim from around the radio/Climate controls and remove. (Use of a panel removal tool, or a right angle scribe tool is recommended).
2. Remove the (8) 9/32 or Phillips screws securing the Radio and Climate controls to the sub-dash.
3. Pull the Radio and Climate controls forward, lower and set the climate control out of the way, disconnect the wire harnesses and antenna lead from the rear of the factory radio and remove radio.

2005-10 CHEVROLET CORVETTE

DASH DISASSEMBLY

1. Carefully lift up and remove the Ride Control switch/ cover plate located at the base of the center console, behind the Shifter.
2. Remove the (2) 9/32 screws located beneath the Ride Control/cover plate.
3. Carefully unfasten and remove the entire Radio/Climate Control trim bezel.
4. Remove the (4) 9/32 screws securing the radio to the sub-dash.
5. Pull the radio forward, disconnect all attached harnesses and antenna lead and remove radio.


2005-09 HUMMER H3
2009 HUMMER H3T

DASH DISASSEMBLY

1. Carefully remove trim from around radio.
2. Remove (4) 9/32 screws securing factory radio and climate controls to the sub-dash
3. Lay climate controls out of the way.
4. Pull radio and climate controls forward, disconnect all harnesses from radio and remove radio.

DIN MOUNT INSTALLATION INSTRUCTIONS

1. Insert DIN sleeve from your new radio into the radio opening of the installation kit.
2. Depress the tabs from inside the sleeves opening upward, outward, and downward to secure sleeve to the installation kit.

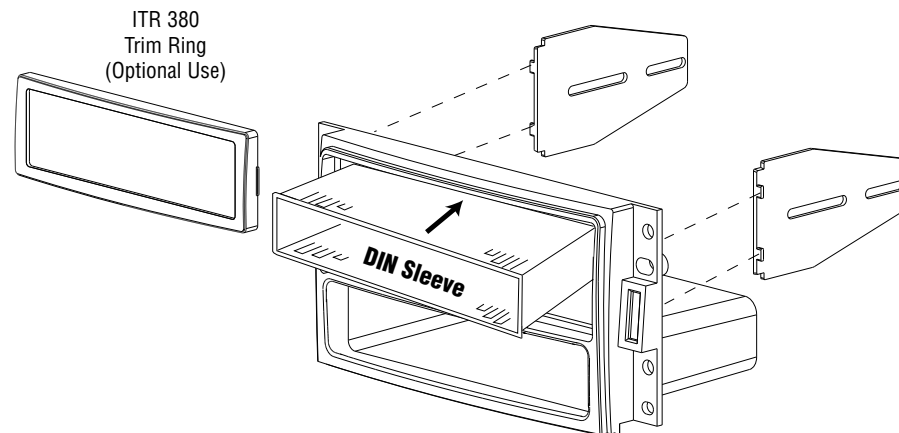

ISO MOUNT INSTALLATION INSTRUCTIONS

1. Attach ISO brackets to the rear of the main mounting kit (see illustration above).
2. Slide radio into kit from rear & attach to ISO mounting brackets using screws supplied with radio (do not tighten screws at this time).
3. Slide radio forward or backward for your desired look and then tighten the mounting screws. Use ISO trim ring when possible.
4. Attach rear support strap (supplied with radio) to rear of pocket and to rear of radio.

