


For information about other American International automotive accessories visit our website at:

<http://www.americaninternational.net>



**American
International**
Car Stereo Installation Kits & Accessories

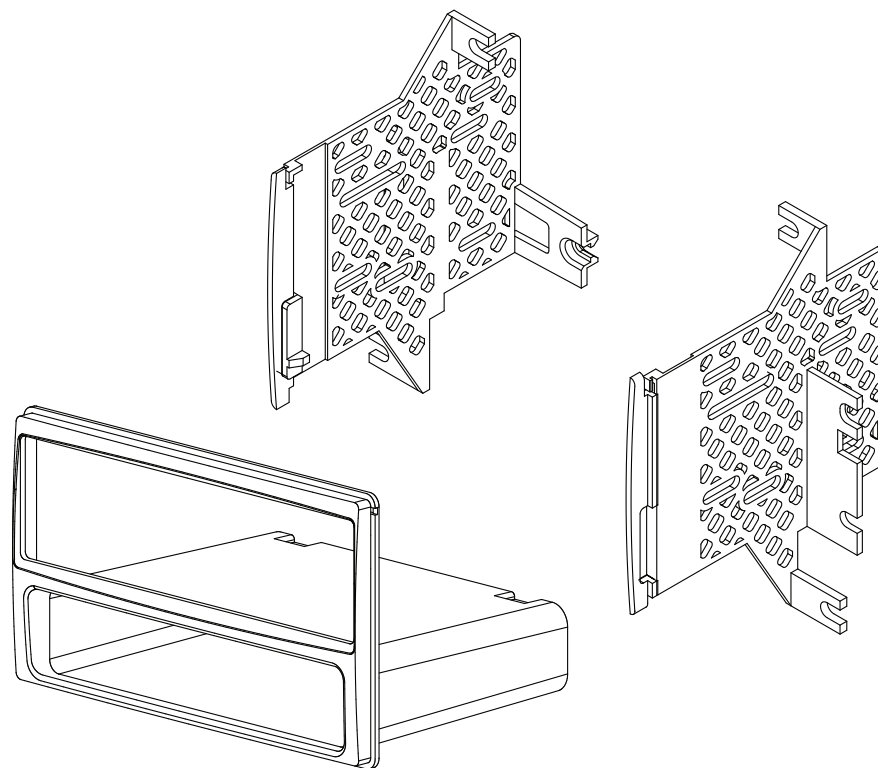

NDK737 Mounting Kit



American International

Automotive Products Division

1040 Avenida Acaso • Camarillo, CA 93012, U.S.A.

USA Sales (800) 336-6500

Canada Sales (888) 922-3006 • USA Fax (805) 388-7950

CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iNDK737

VEHICLE APPLICATIONS

Nissan

2011-13

JUKE

2012-13

NV

2011-13

QUEST (with Base CD)

DASH DISASSEMBLY

1. Carefully lift straight upward and remove the center Climate Control slide lever button. (This step required for vehicles equipped with Manual Climate Controls only).
2. Using a wide Flat Blade Screwdriver, located on the bottom edge of the Climate Controls are (2) slots, carefully pry the bottom edge of the Climate Control Trim bezel forward to release, and set out of the way (For Digital Climate Controls, simply Pry the Climate Control Module forward to release and set out of the way).
3. Remove the (2) Phillips screws securing the Lower edges of the Radio/Vent trim bezel.
4. Starting from bottom side edges and working your way to the top, carefully pry the Radio/Vent trim bezel outward to release, disconnect the attached harness and remove the trim bezel.
5. Remove the (4) Phillips screws securing the radio to the sub-dash.
6. Pull the radio forward, disconnect all attached wire harnesses and antenna lead(s) and remove radio.

2012-13 NISSAN NV**DASH DISASSEMBLY**


1. Using a soft tool remove air vent panel to the left side of the instrument cluster.
2. Using a soft tool remove air vent/hazard button panel to the right side of the radio. Unplug hazard button harness.
3. Using a soft tool remove the key cylinder trim.
4. Loosen the right side of the panel under the steering column enough to expose the bottom of the instrument cluster trim.
5. Using a soft tool, remove the instrument cluster trim panel.
6. Remove (4) screws from the radio trim panel.
7. Remove the radio trim panel. Unplug harness.
8. Remove (4) screws from the sides of the OEM Radio.
9. Remove the OEM radio. Unplug harness.

2011-13 NISSAN QUEST**DASH DISASSEMBLY**

1. Remove 2 lower dash panels to the rear of the center console, both left and right side, including 4 retaining clips.
2. Unclip and slide lower console back.
3. Remove panel in upper dash passenger door jam.
4. Remove (1) Phillips screw from behind just removed panel. Using a soft tool, carefully unclip and remove center dash trim from the door jam to the center console, working right to left.
5. Loosen the right side of the panel under the steering column enough to expose the screw holding cup holder trim panel. Remove (1) screw.
6. Loosen the left side of the cup holder trim panel.
7. Using a soft tool Loosen the panel around the hazard button and start button enough to expose the screw holding shifter trim panel.
8. Remove (2) screws from right and left side of the panel around the shifter/climate controls; loosen enough to expose the bottom of the radio/air vent trim panel.
9. Remove (2) Phillips head screws holding the radio trim panel. Remove panel.
10. Remove (4) screws from the sides of the OEM Radio.
11. Unclip the OEM radio and remove. Unplug harness.

BRACKET PREPARATION


Fig E

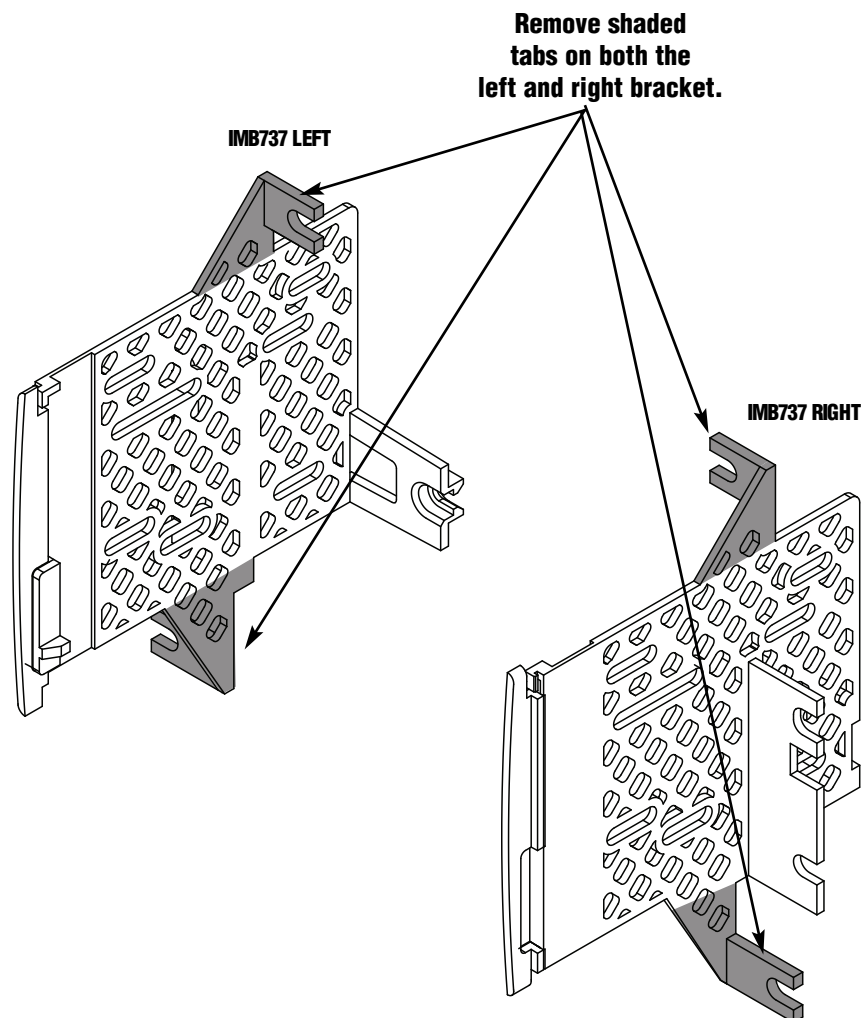

SINGLE ISO KIT ASSEMBLY INSTRUCTIONS

1. This kit is an (ISO) mounting kit only. Remove metal sleeve from radio.
2. The mounting sleeve of your new radio and trim ring cannot be used when ISO mounting an aftermarket radio. Your radio must have a removable trim ring.
3. Insert left and right mounting brackets to rear of kit as shown in Figure B and attach brackets to rear of pocket with small phillips screws supplied with kit.
4. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
5. Slide radio forward or backward for desired look and tighten screws.


Fig B

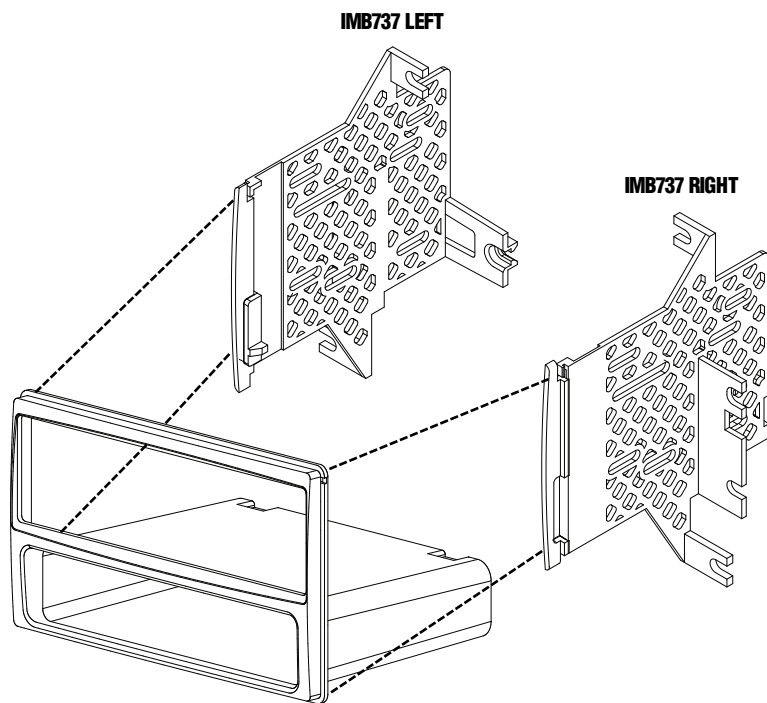


DOUBLE DIN KIT ASSEMBLY INSTRUCTIONS

1. Remove the 3 shaded tabs on left and right mounting brackets as shown in Figure C.
2. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
3. Slide radio component forward or backward for desired look and tighten screws.
4. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (optional).

Fig C

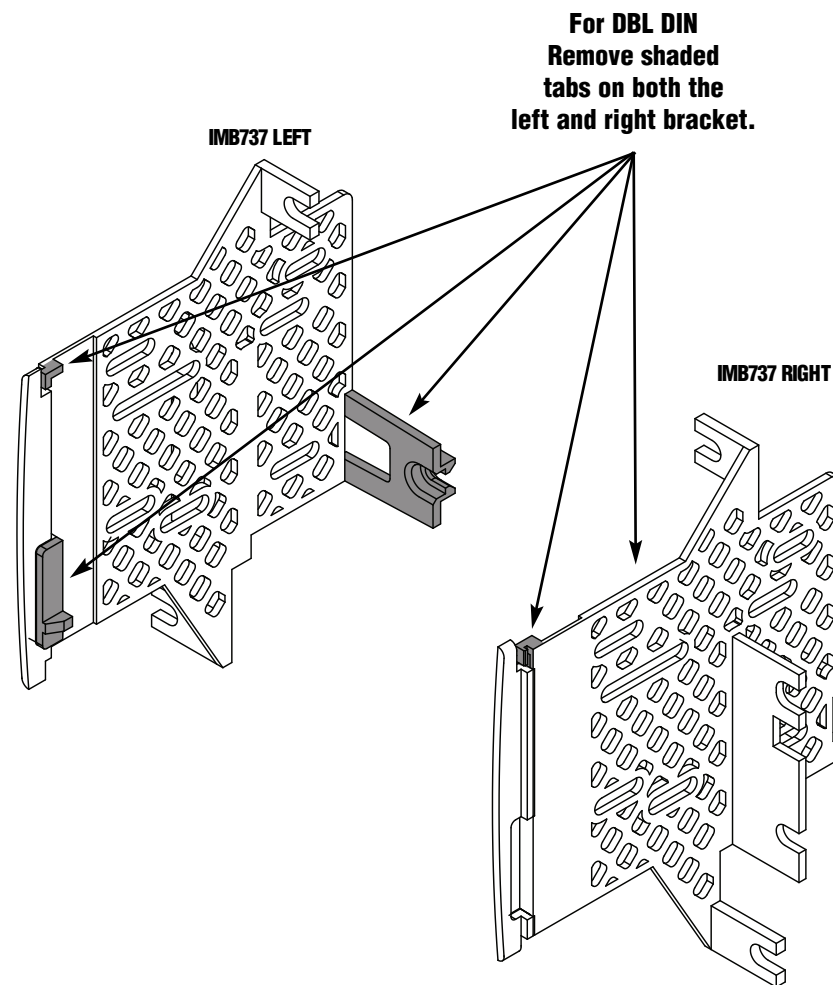

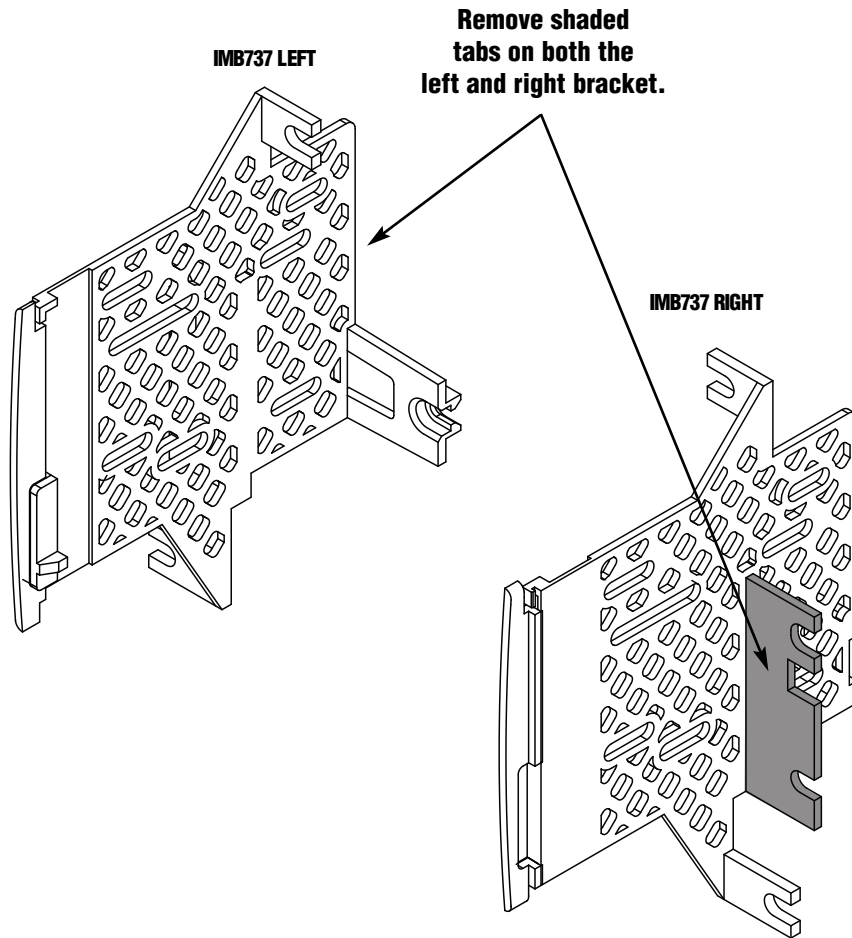BRACKET PREPARATION**Fig D****SINGLE ISO MOUNT BRACKET PREPARATION**

- Carefully remove the 1 shaded section on left and right mounting brackets as shown in Figure A.

Fig A