



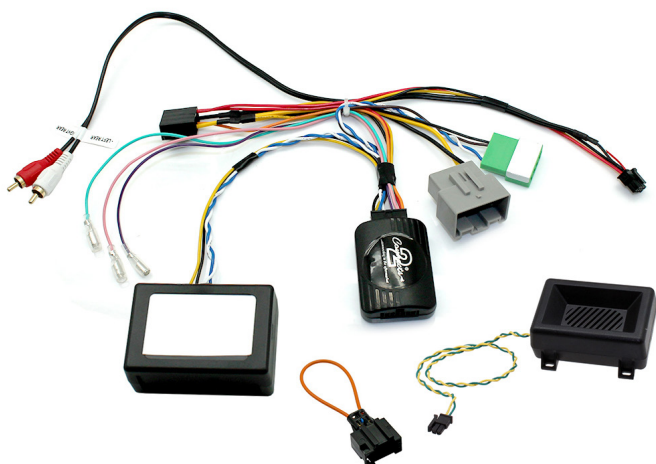

www.connects2.com

**Designed and
Engineered
in the UK.**



ABOUT THIS PRODUCT...

CT51-LR04

Active system adapter for Land Rover Freelander vehicles.


Product Contents

- Interface
- Harness
- Instruction

Application

Freelander II 2006 - 2014

Retains OEM Fibre Amplifier

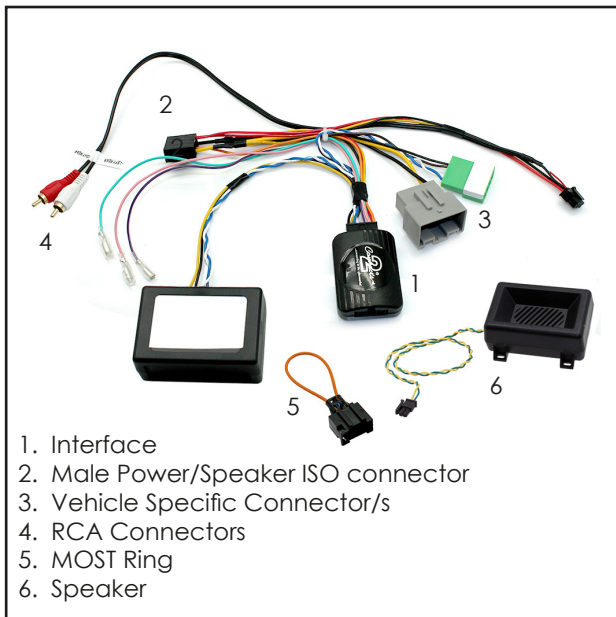

Prior to Installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

Technical Support

Connects2 want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Connects2, try to provide as much Information as possible. This will speed up the process and help us to help you.

Please use our dedicated online technical support centre: support.connects2.com




Subscribe to our YouTube Channel for installation guides and tips... www.youtube.com/connects2

FITTING GUIDE

- 1. Remove and disconnect the original head unit.
- 2. Connect the 14 way molex connector to the interface.



- 3. Connect the male power/speaker ISO harness (Pg.2. Fig 2.) to the female power/speaker ISO harness from the aftermarket head unit.

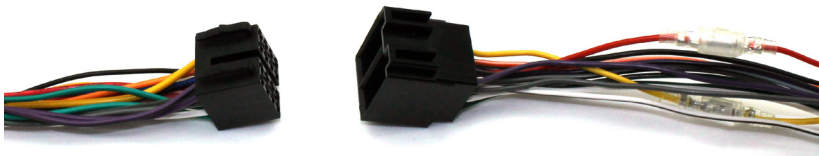

For aftermarket head units which do not have an ISO connector the interface uses the following wiring colours:

Wire Colour	Function
Yellow	Permanent 12V
Black	Ground
Red	12V Ignition
Orange	Illumination
Blue	Antenna Remote
Pink	Speed Pulse
Green	Park Brake
Purple/White	Reverse Gear

Wire Colour	Function
Purple	Right Rear Speaker +
Purple/Black	Right Rear Speaker -
Green	Left Rear Speaker +
Green/Black	Left Rear Speaker -
Grey	Right Front Speaker +
Grey/Black	Right Front Speaker -
White	Left Front Speaker +
White/Black	Left Front Speaker -

- 4. Connect the female vehicle specific connector to the male vehicle connector (Pg.2. Fig 3.)
- 5. Connect the red/white RCA connectors (Pg. 2 Fig 4.) to the inputs on the head unit.

FITTING GUIDE

6. Your vehicle will have two fibre amp cables, one into the OEM head unit and one into the OEM display.

a) Plug the cable originally designated for the head unit into the CT51-LR04 interface (Pg.2 Fig 5.)

b) Remove the cable from the OEM display and replace it with the included MOST loop (orange wire) to reroute the signal.

7. Test head unit for correct operation and reassemble the dash.