

...connecting to the aftermarket

### CTSTY00CAA

# Toyota Combined Steering Wheel Control/Antenna Adapter Interface






Analogue







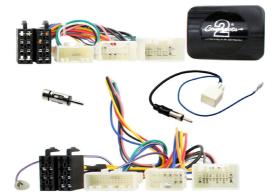

## INSTRUCTION MANUAL

www.connects2.com



#### CTSTY00CAA

Combined steering wheel control interface for Analogue Toyota vehicles.

Supplied with both connector styles (20 & 28 Pin) for simple installation into many vehicles.

#### **Product Contents**

- 1. Interface
- 2.2 x Harness
- 3. Instruction

#### **Application**

Avensis 2001>

Corolla 2001>

RAV4 2001>

Yaris 2001>

4Runner 2001>

Avanza 2003>

Estima 2001>

Previa 2006>

Fortuner 2005>

Innova 2006>

Landcruiser 2007>


Prado 2007>

Matrix 2003>

Vios 2006>

Rush 2006>

Prius 2010>

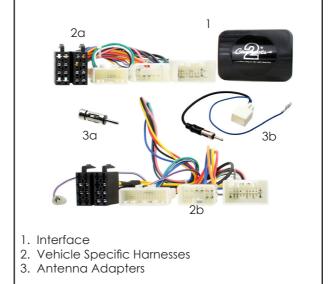

#### Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

### **Technical Support**

Connects2 want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Connects2, try to provide as much Information as possible. This will speed up the process and help us to help you.

Please use our dedicated online technical support centre: support.connects2.com



Subscribe to our YouTube Channel for installation guides and tips... www.youtube.com/connects2

#### FITTING GUIDE

- 1. Remove and disconnect the original head unit.
- 2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.



3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit. This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.

Important Note: This step must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.



4. Connect the 14 way molex connector to the interface.



5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit.






For aftermarket head units which do not have an ISO connector the interface uses the following wiring colours:

| Wire Colour | Function      |
|-------------|---------------|
| Yellow      | Permanent 12V |
| Black       | Ground        |
| Red         | 12V Ignition  |
| Orange      | Illumination  |
| Purple      | Reverse       |

| Wire Colour  | Function              |
|--------------|-----------------------|
| Purple       | Right Rear Speaker +  |
| Purple/Black | Right Rear Speaker -  |
| Green        | Left Rear Speaker +   |
| Green/Black  | Left Rear Speaker -   |
| Grey         | Right Front Speaker + |
| Grey/Black   | Right Front Speaker - |
| White        | Left Front Speaker +  |
| White/Black  | Left Front Speaker -  |

6. Connect the female vehicle specific connector to the male vehicle connector and connect the included antenna adapter to the head unit. Test head unit for correct operation.

#### STEERING WHEEL CONTROL FUNCTIONS

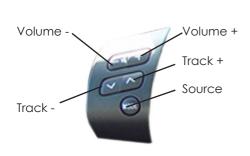



**Vehicles with 20 Pin Connector** 

Vehicles with 28 Pin Connector